




V4 Wood Flooring®

NAL56 Cromer Sands

Technical Data Sheet

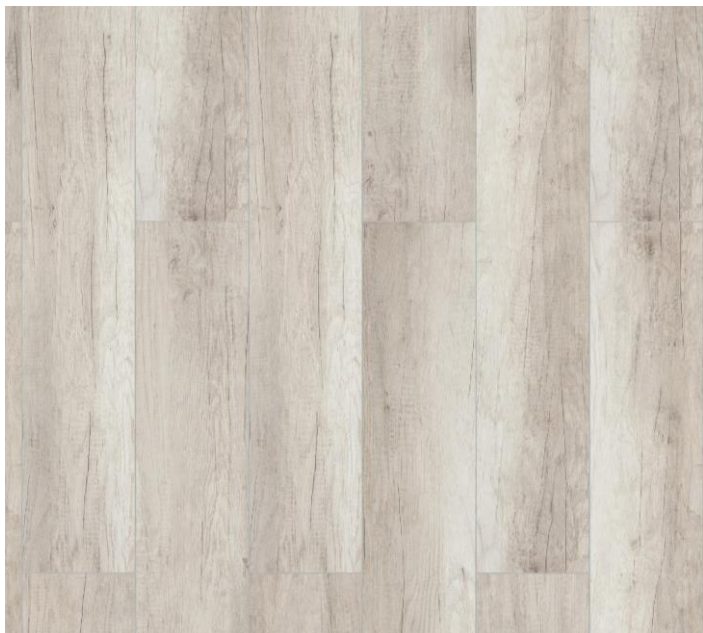

Product Details:

Product Code	NAL56
Collection	NATUREFFECT® AQUALOCK
Construction	Laminated HDF
Species	Pine HDF
Product Type	Laminate Flooring
Surface	Embossed
Finish	AC4 Rated PU Coating
Dimensions	192 x 8 x 1285 mm
Top Layer	PU Coated Paper Foil
Core Layer	Pine HDF
Grade	Rustic Pattern
Pack Size	1.973 m ²
Pack Contents	8 Planks
Joint Type	Locking System
Edge Profile	Bevel Edged on 4 sides

Technical Information:

Origin	Europe
UKTR / UK Timber Regulation	Full documented evidence of legality of timber
FSC® Certification	Not available with this product
PEFC® Certification	Not available with this product
Wear	EN 13329 AC4 / Class 32
Slip Resistance	DS
European Reaction to Fire Classification	Cfl-S1
Release of Formaldehyde	EN 717-1 (Test result E1)
Thermal Conductivity	EN 12524 (Test result: 0.075 W/(mK))
Tog Rating	0.7

Installation Methods

Fully Bonded	Yes*
Secret Nailed	No
Floated on Underlay	Yes*
Over Underfloor Heating	Yes* (fully bonded installation recommended)
V4 Magnetic	Yes*

All V4 floors must be installed by an experienced and fully competent flooring installer who have the necessary skills to complete each installation in line with the BS8201:2011 standard. The responsibility of inspection of goods lies with the installer, and it is their duty to notify V4 of any potential concerns prior to installation. Installation of your V4 floor is considered acceptance of goods.
*Subject to correctly prepared and compatible subfloor and in conjunction with correct installation.

Grading: Rustic Look

NAL56 is designed to have a rustic wood look appearance. This means that you can expect to see characteristics that you would see on a rustic grade wood floor, including knots of varying sizes. Our Natureffect Aqualock Laminate is also complete with a registered embossed surface layer, to give a tactile oak effect feel underfoot.

Maintenance: Laminate Floor Care



Sweep with a soft bristle brush, or the parquet attachment on your vacuum cleaner. Always ensure you are using PH Neutral cleaners. Avoid scratches by minimising grit and dust, install doorway entrance mats and felt pads to protect furniture. Avoid soaking the floor with water.
Scan the QR code to visit our Laminate Floor Care page on our website, for more details.

Further Information:



Scan this QR code to visit the NAL56, Cromer Sands product page on our website, where you can find more information on the installation and maintenance, make an enquiry and order your free sample.

Post Installation:

DO NOT COVER THIS PRODUCT WITH A NON-BREATHABLE COVERING FOR LONGER THAN 1 WEEK. Prolonged covering may create a microclimate which can damage the protective top layer. Underfloor heating will greatly magnify the affect.